



Manual air conditioning

The rooms have air-conditioning with different functions. You can control the air conditioning from the white control box, which is on the wall next to the entrance of the room.

- The temperature can be adjusted with the **TEMP** ▲ and ▼ buttons.
- The fan speed can be adjusted with the  button.

There are 5 different functions. You can switch functions with the  button.



AUTO
Mode

The room will be cooled or heated within the two selected temperatures.



COOL
Mode

The room will be cooled when the room temperature is above your selected temperature.



HEAT
Mode

The room will be heated when the room temperature is below your selected temperature.



DRY
Mode

The room will be less humid and cooled if the room temperature is above your selected temperature.



FAN
Mode

The air conditioning will only blow air, which is neither cooled nor heated.